

Register your product and get support at
www.philips.com/welcome

HP8212


HP8213






HP8215



User manual

      PHILIPS

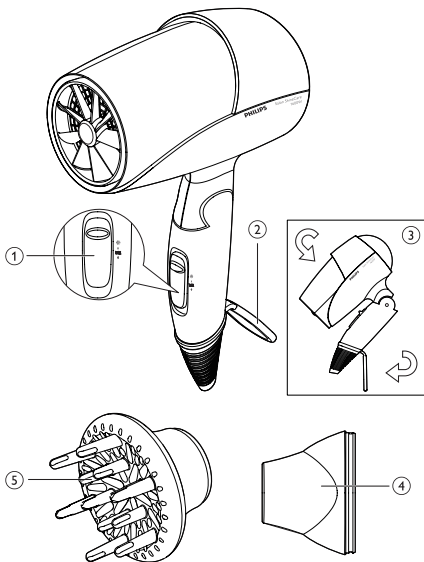

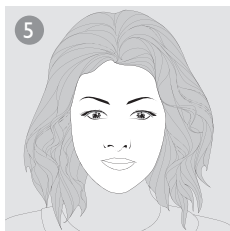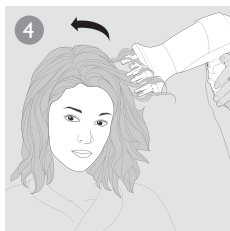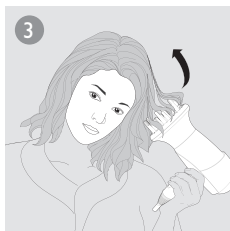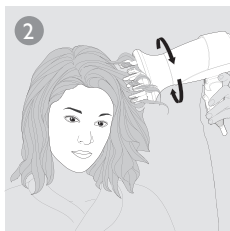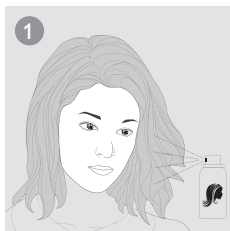

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.



- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
 - Do not use the appliance for any other purpose than described in this manual.
 - Do not use the appliance on artificial hair.
 - When the appliance is connected to the power, never leave it unattended.
 - Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
 - Do not wind the mains cord round the appliance.
 - If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
-

Electromagnetic fields (EMF)

This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.



2 Dry your hair

- 1 Connect the plug to a power supply socket.
 - For precise drying, attach the concentrator (②) onto the hairdryer.
 - To enhance volume for curls and bouncy style, attach the volume diffuser(①, only for HP8215) onto the hairdryer.
 - To disconnect the attachment, pull it off the hairdryer.
- 2 Adjust the temperature switch (⑤) and airflow switch (⑥) to suitable positions. Press the Cool Shot button (❄ ④) for cool airflow to fix your style.

Switch	Setting	Function
	⌘ Quick-Dry	Dry shower-wet hair quickly
	⌋ Thermoprotect	Gently dry the hair at a constant temperature of 55°C
	● Cool Care	Dry the hair with care and seal in shine
Airflow	II	Strong airflow and fast drying
	I	Gentle airflow and styling
	○	Switch off

- The ionic function is activated when the appliance is switched on, which provides additional shine and reduces frizz, and the ionic indicator(③) lights up.
 - ↳ When the function is on, a special odor may be smelt. It is normal as it is caused by the ions which are generated.

Using the diffuser

Diffuser is an attachment that diffuses the air. Instead of straight air flow, you will get a rounded air flow with the diffuser. When it applies on curly hair, it provides more curly definition, and keeps hair from frizzing.

- 1 Attach the diffuser to the hair dryer.
- 2 Apply styling product to your wet hair to ensure your curls stay in place.
- 3 Turn the hair dryer to setting I for best results as this will enhance the diffuser ability to minimize air flow and preserve your curls.
- 4 You could position the diffuser into the hair and push upward. If you have longer hair, place the diffuser at the ends of your hair and swivel your hair up into the diffuser as you move up towards your roots. Once you have curled up a section, let it stay for 15 seconds before the next section. This will help you set the style.
- 5 When you finish all sections, place the diffuser at the roots of your hair and move it in circular motion. it will give the roots volumizing effect.

After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 Clean the appliance with damp cloth.
- 4 Fold the appliance (⑧).
- 5 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (⑦).

3 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

4 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.



Specifications are subject to change without notice
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

3140 035 31831

